

6 WATCH TV

Change the channel you are watching by entering the channel number using the number buttons on the remote control. Or, you can press the **(P)** or **(V)** buttons to step through the channels in order.

Press **(V)** or **(V)** to turn the volume up or down. You can mute and unmute the sound altogether with **(M)**. To view information about what is on whilst watching TV, press **(i)** to display the browsing bar. It is also displayed automatically when you change channels. Press **(i)** whilst the bar is displayed for a full description of the selected programme, or press **(P)** to see what is on next. Press **(A)** or **(V)** to browse what is on other channels, and press **(OK)** to change channels.

When subtitles are available for a programme it is indicated by a **(SUB)** symbol in the browsing bar. To turn on subtitles, press the **(SUB)** button. To turn them off, press the **(SUB)** button again.



If audio description (a spoken description of the broadcast) is available for a programme it is indicated by an (AD) symbol in the browsing bar. To turn on audio description, press the **(AD)** button. To turn it off, press the **(AD)** button again.

For more information about the symbols displayed in the browsing bar, please refer to page 15 of the User Guide.



To find out the programmes scheduled to be shown up to eight days ahead, press **(GUIDE)** then **(OK)** to select the channels you want to view. Browse the scheduled programmes using **(A)** and **(V)** to move through the channels and **(L)** and **(R)** to show the programmes showing at different times.

Press **(OK)** to switch to the programme highlighted. If the programme is on at the time, the receiver will switch to that channel immediately. If the programme is scheduled for later on, a reminder is set. When the programme is about to start, a message is displayed on screen and, after a few seconds, the receiver automatically switches to the necessary channel.

To immediately return to watching TV from any menu, press **(EXIT)**.

Digital text and interactive services are available from some channels, and you can use them by following the on-screen prompts and pressing **(TXT)** or the **(RED)** button while watching the channel. If you have connected your Plaza HD•T2 to the internet, you can open YouTube at anytime by pressing the **(YouTube)** button on the remote control. To open other Apps, press the **(GUIDE)** button then highlight the App you want to open and press **(OK)**.

Switch off your receiver by pressing the (Power) button, and press the button again to turn it on.

Manhattan

Plaza HD•T2 Remote Control

(Power) Standby - switches the receiver on and off.

(M) Mute - silences the receiver's sound.

(0, 1 ... 9) - buttons to directly select channels and enter numeric values in the set-up menus.

(Last) Switches back to the last channel watched.

(Star) Displays your favourites lists.

(MENU) Displays the main menu screen.

 
(i) Displays channel and programme information.

(Up, down, left, right) - move the highlight bar in menus and in the programme guide, and allow you to browse the channels and programmes.

(OK) Selects the option in a menu.

(LIST) Displays the channel list.

(GUIDE) Displays the programme guide.

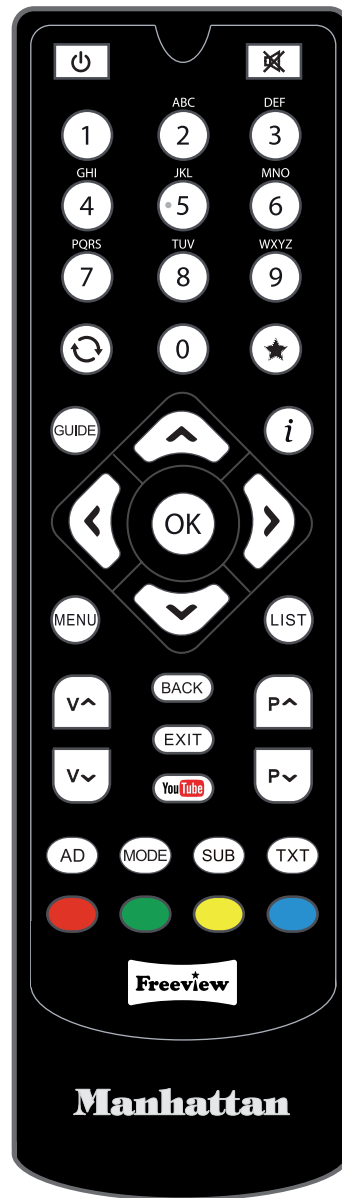

(BACK) Exits a menu and returns to the main menu.

(EXIT) Exits a menu and returns to normal TV viewing.

(YouTube) Opens YouTube

(V) Turns the volume up and down.

(P) Switches to the next or previous channel. Moves one page up or down in the channel list.

(AD) Turns on or off audio description.

(MODE) Switches between available screen display modes.

(SUB) Turns on or off subtitles.

(TXT) Displays interactive and digital text services (where available).

(Red, Green, Yellow, Blue) Chooses options within menus.

Manhattan



Quick Start Guide

Plaza HD•T2

Freeview HD Receiver with Apps

1 UNPACK

Unpack and check the contents of your Manhattan Plaza HD•T2 pack:



 
Plaza HD•T2 receiver



Quick Start Guide



Main User Guide



Batteries for the remote control



Remote control



 
HDMI cable to connect to an HD-ready TV

For assistance, please call the Manhattan helpline on **020 8450 0005** or visit our website at **www.manhattan-tv.com**

Check your coverage
Check Freeview HD coverage in your area by visiting **freeview.co.uk**

2 CONNECT TO AN AERIAL

To receive Freeview, you must connect your Plaza HD•T2 receiver to an appropriate TV aerial that has been correctly installed. If your aerial is unable to provide adequate signal, it may need to be realigned. Please consult a professional.

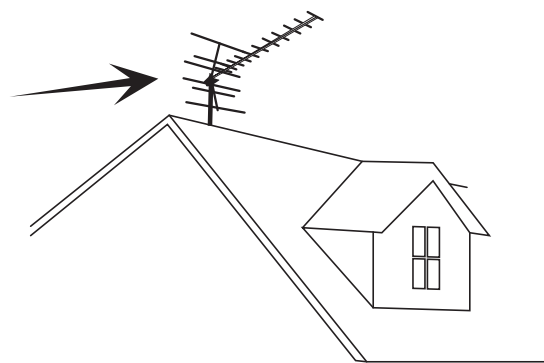


3 PLUG IN

Place your Plaza HD•T2 receiver on a firm, level surface close to your television, a mains electricity socket, and the cable from the TV aerial.

Connect the cable from your TV aerial to the ANT IN socket at the back of the receiver.

Make sure your television is turned off and connect the HDMI cable to the HDMI socket on the rear of the Plaza HD•T2 and to an HDMI socket on your television. If your television has no HDMI socket, then it must be connected to the receiver by SCART or RCA cable, and you will not be able to watch Freeview channels in high definition. If you need more guidance, check your television manual.

 
Plug the mains power lead from the back of the receiver into an available mains socket that is turned off.

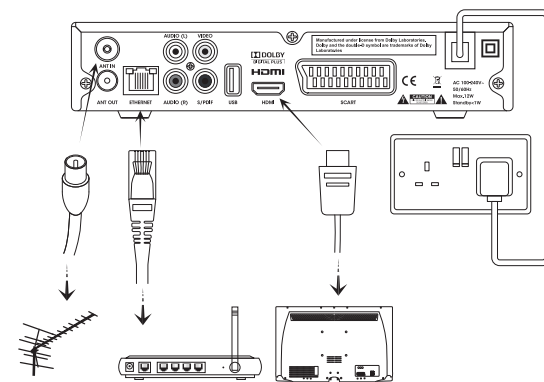

To use Apps like BBC iPlayer or YouTube, the Plaza HD•T2 must be connected to your internet router or hub using an ethernet cable (not supplied). Plug one end of the ethernet cable into the ETHERNET socket at the back of the Plaza HD•T2, and the other into your hub or router. Make sure the connections are fully pushed in - you'll hear a click as they lock into place. Consult your router or hub's documentation for further guidance.


4 SWITCH ON

 Remove the battery compartment cover from the back of the Plaza HD•T2 remote control by lifting it up while pushing the catch. Insert the two AAA sized batteries as marked on the inside of the compartment. Replace the compartment cover.

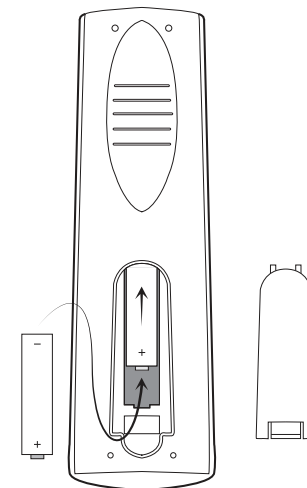

Turn on your TV set and choose the HDMI input (see your television manual).

 Switch on the mains socket the Plaza HD•T2 is connected to. The power indicator light on the front will illuminate blue to indicate the receiver has been turned on successfully. After a few seconds, step one of the freesat installation process will be shown on the television screen.

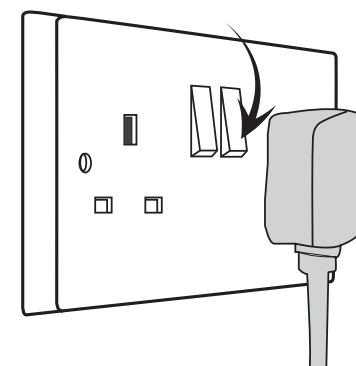

If you do not see this screen (pictured opposite), please refer to the **Troubleshooting** section in the main User Guide.

5 TUNE IN

When the first installation step is displayed, use the left and right buttons to select the screen type of your television (16:9 Widescreen or the squarer 4:3 Traditional). Press the down button to highlight the HDMI Resolution selection box, and then use the left and right buttons to select the correct resolution for your television (see your television's manual for guidance, or select 720p if unsure).

Press the down button to select "Next" and then press the OK button to display the next installation step.

If you don't see a picture because you selected an incompatible resolution, press the BACK button to return to the first step and select a different HDMI resolution.

Your Plaza HD•T2 receiver will scan for channels, displaying the total number of TV, radio and data channels found. When the scan is complete, press the OK button to display the next installation step.

A PIN is required to enable and disable parental guidance, access locked channels or restore to factory default. Enter your choice of PIN by pressing the required number button (0, 1 ... 9) for each of the four PIN digits. Press the OK button to complete setup.

Setup is now complete. Your PIN number will be displayed on-screen along with a reminder to make a note of it. When ready, press the OK button and enjoy your Plaza HD•T2.

